



Remove frame and graphic from bag.




Ensure "adjustable knobs" of frame are on the floor. Pull up display into upright postion.



Connect latches together securely



Adjust leveling knobs for desired angle. OneFabricPlus™ display can now be moved easily into position.

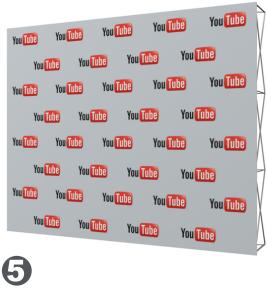

Attach graphic and enjoy!


WARNING! DO NOT FORCE CLOSED.

To avoid damage, all latches must be


disconnected before collapsing frame.




ONEFABRICPLUS® Graphic Installation

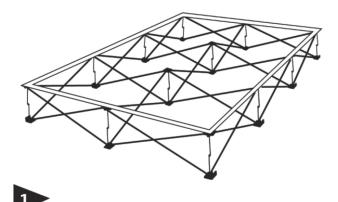

Assemble frame and lay flat on its back. Remove existing graphic.

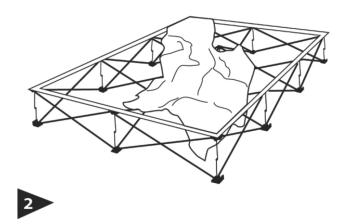

Starting at one corner, attach Velcro® on graphic to Velcro® on frame. Overlap Velcro® of graphic a 1/4" on all sides of Velcro® of frame. Note: Velcro® should not be flush.

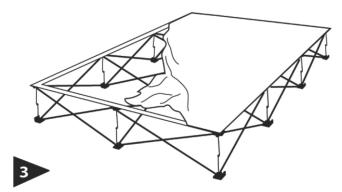

Work in continuous direction around the frame until graphic is completely attached.



If needed, adjust Velcro® for taut fit.

